

owner's manual

model 6740

version 21.01.26

plusOne®

travel wand

Thank you for purchasing the plusOne® travel wand. To ensure you have the best possible experience with this product, please read all instructions and precautions carefully before use.

CAUTION

This travel wand is not a toy. **KEEP OUT OF REACH OF CHILDREN.** Discontinue use if you or your partner experience any discomfort or pain. Carefully read all warnings and directions prior to use.

batteries:

The travel wand requires two (2) 'AAA' 1.5 volt batteries for operation. Either alkaline or lithium batteries can be used, but do not mix alkaline, lithium, or rechargeable batteries together. Do not use old or damaged batteries.

Battery installation / replacement:

1. Open the battery compartment by twisting the battery door counterclockwise (Fig 1).
2. Insert two (2) 'AAA' batteries into the battery compartment according to the polarity markings (+ / -) indicated within the compartment.
3. Replace the battery compartment cover and twist clockwise to lock into place (Fig. 2).

Note: The device will not operate if the batteries are improperly installed.

Replace the batteries as soon as you notice the device is running slower than normal.

Fig. 1


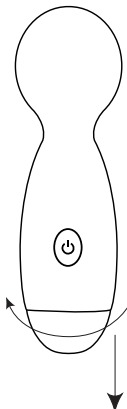


Fig. 2



Fig. 3

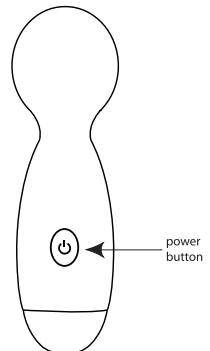

using the travel wand:

Make sure the batteries are properly installed.

Power the device OFF and ON by holding the power button for 1.5 seconds. Press firmly to cycle through the 10 vibration settings (Fig. 3).

cleaning:

Be sure to clean thoroughly before and after each use. Clean using a mild soap and warm water.

storage:

Store in a cool dry place separately from other sex toys; sex toys of different materials can damage each other if left in contact.

quality:

This product is manufactured using body-safe silicone that is skin-friendly, harmless to the human body, and free from phthalates, BPA and latex. Use water based lubricant only.

contact / warranty / support:

Your new plusOne® product carries a warranty against manufacturing defects for two years from the date of original purchase. plusOne® will, at our option and upon submission of a valid proof of purchase within the warranty period, repair or replace the product free of charge.

For assistance or for issues related to performance, damages, warranty, regular maintenance or customer feedback please contact plusOne™ toll free at (800) 514-2546, Monday – Friday from 8:30 am until 5:30pm EST or email us at info@myplusOne.com

to learn more about the full plusOne® product line
& more information on ways to use your new travel wand
go to myplusone.com or follow us on social:



@_myplusOne



@plusOneclio



@your_plusOne