

plus One[®]

luxe vibrating plug



 
instruction manual



product overview

1) power button

Press and hold the power button for 3 seconds to turn on. Press firmly to cycle through the 10 settings. Press and hold for 3 seconds to power off.

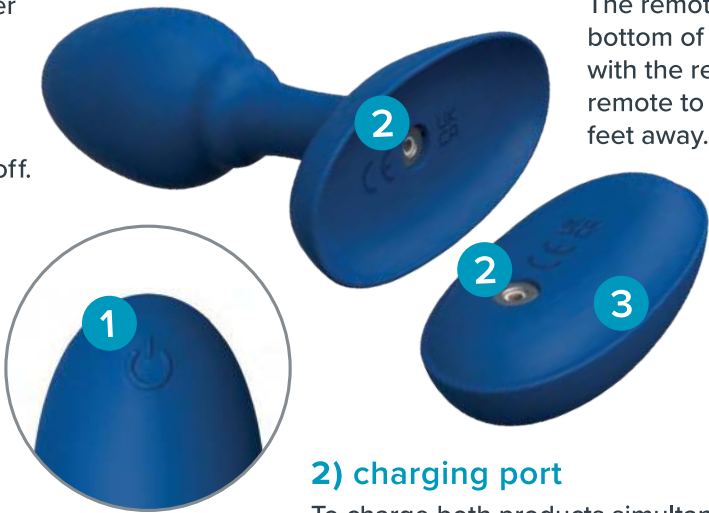

3) remote

The remote magnetically attaches to the bottom of the vibrating plug. Use the plug with the remote attached or detach the remote to control vibrations from up to 8 feet away.

2) charging port

To charge both products simultaneously, attach the twin-headed magnetic charging cable to the charging contacts on the vibrating plug and remote.

 
how to charge



1. The charging contacts are the small metal circles located at the bottom of the vibrating plug and remote.



2. Line up the magnetic charging heads with the contacts on the vibrating plug and remote.

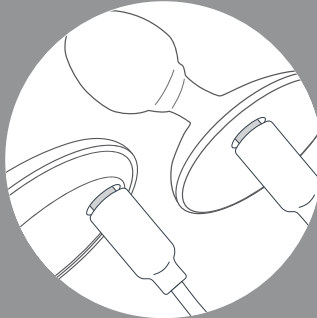

3. The cables will magnetically attach into place. The LED lights on the vibrating plug and remote will pulsate slowly to indicate charging.

special instructions:

Do not turn on while charging and/or cleaning. While charging the light will flash; the light will turn solid when fully charged. Low battery alert: Light will flash rapidly when battery is running low. Use only with 5-volt USB wall adapter (standard mobile phone charger). Allow 90 minutes for a full charge. Use water-based lubricant only.

cleaning:

Clean thoroughly with mild soap and warm water, before and after each use.

storage:

Store in a cool dry place separately from other sex toys; sex toys of different material can damage each other if left in contact.

quality:

This product is manufactured using body-safe silicone that is harmless to the human body; free from phthalates, BPA and latex.

 
warnings:

Discontinue use if there is any discomfort for you or your partner. Do not expose device to water while charging.


ways to use



Apply plusOne hydrolube™ personal lubricant to the rounded part of the luxe vibrating plug. We recommend only using water-based lubes.

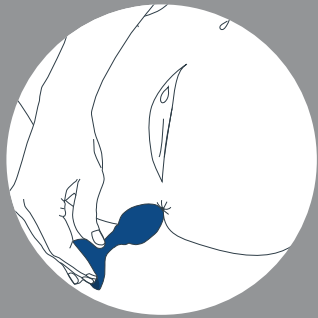

 Insert the luxe vibrating plug by relaxing your muscles and slowly sliding it into place. Remember: the plug handle must stay outside the body for easy removal.

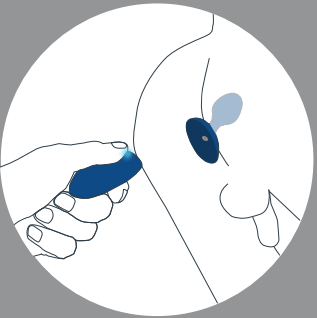

Turn on the luxe vibrating plug and explore the 10 high-performing vibration settings to reach the ultimate pleasure sensation. Have a partner use the remote to control the vibrations up to 8 feet away.

The battery shall be disposed in accordance with the local laws and regulations. If possible please recycle it. Users shall not take out or replace the battery by themselves; doing so may damage the product.

two year limited warranty:

Your new plusOne® products carry a warranty against manufacturing defects for two years from the date of original purchase. plusOne® will, at our option and upon submission of a valid proof of purchase within the warranty period, repair or replace the product free of charge.

For assistance or for issues related to performance, damages, warranty, regular maintenance or customer feedback please contact plusOne® toll free at (800) 514-2546, Monday – Friday from 8:30 am until 5:30pm EST or email us at info@myplusOne.com

FCC COMPLIANCE STATEMENT:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.