

plus One[®]

intimate groomer set



instruction manual


product overview




how to charge the intimate groomer




1. Plug the charging cable into the back of the charging stand.

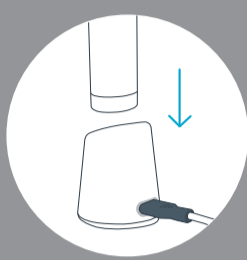

2. Place the device in the charging stand and push down firmly to plug the device into the stand.

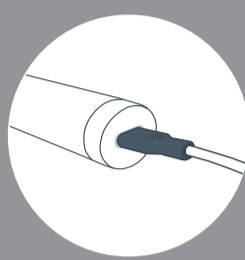

3. The groomer can also be charged by directly inserting the charging cable into the bottom of the groomer. Make sure to firmly insert the charging head into the groomer's charging port.

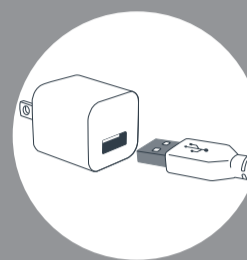

4. Plug the other end of the charging cable into a 5v power source. Charge for three hours for a complete charge.

special instructions:

Charge the groomer before the first use. The LED spotlight on the front of the groomer will pulse slowly when the groomer is charging and turn solid once the groomer is fully charged. Do not leave the groomer charging for longer than 24 hours. Low battery alert: power button light will flash rapidly when the battery is running low. The groomer will provide **60 minutes** of use after three hours of charging.

The travel bullet requires one (1) 'AAA' 1.5 volt battery for operation. Do not use old or damaged batteries. **DO NOT** remove sticker from inside of the device. Discontinue use if sticker is removed from the device. The device will not operate if the battery is improperly installed. Replace the battery as soon as you notice the device is running slower than normal.

cleaning:

To keep the groomer in good condition, we recommend cleaning it after each use. Make sure the groomer is turned off before cleaning. You can clean the groomer by rinsing it under warm water with mild soap. The groomer head can be pulled from the handle and rinsed under warm running water. Dry off with a clean, soft cloth.

Clean the travel bullet thoroughly with mild soap and warm water, before and after each use.

storage:

Store in a cool, dry place separately from other sex toys; sex toys of different material can damage each other if left in contact. Store the intimate groomer with the protective cap on the groomer head.


quality:

This product is manufactured using body-safe silicone that is harmless to the human body; free from phthalates, BPA and latex.

how to use

step one:

Before you get started, determine your trim length. For a close shave, leave the trimming guides off. For longer hair length, add the medium trimming guide (3 mm) or the long trimming guide (5 mm) to the groomer head. Use the short trimming guide (0 mm) for sensitive areas. For best results, hold blade flat against skin.

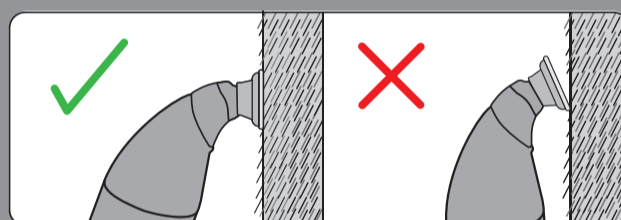

step two:

If shaving down to the skin, wet your skin with warm water and apply a thin layer of shaving cream. Once the groomer is turned on, start shaving the sections of hair you want to remove. Apply light pressure and use short, even strokes. Turn groomer off once complete.

step three:

If trimming hair with a trimming guide, you can use the groomer on wet or dry skin. To attach the trimming guide, press it firmly on top of the groomer blade to secure. Once the groomer is turned on, start trimming the sections of hair you want to remove. Apply light pressure and use short, even strokes. Turn groomer off once complete.

important safety instructions:

To help keep you safe and to get a great shave or trim, please read these warnings and instructions regarding the intimate groomer (the "groomer" or "device") before you get started. When using an electrical appliance, basic precautions are required to always be followed, including the following: Read all instructions before using the intimate groomer.

DANGER:

TO REDUCE THE RISK OF ELECTRIC SHOCK:

- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning.

WARNINGS:

TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS:

- An appliance shall never be left unattended when plugged in.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Use this appliance only for its intended use as described in this manual. Do not use any attachments not specified by the manufacturer.
- Never operate this appliance when it has a damaged cord or plug, when it is not working properly, after it has been dropped or damaged, or if the charging base has been dropped into water. Return the appliance to a service center for examination and repair.
- Keep the cord away from heated surfaces.
- Keep the air openings free of lint, hair, and similar objects.
- Never drop or insert any objects into any opening.
- Do not use outdoors or operate while aerosol (spray) products are being used.
- Do not use this appliance with a damaged or broken comb, foil, blade, guide, or cutting unit as it has the potential to result in facial injury.
- Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to off position (e.g. "0") then remove plug from outlet.
- Unplug the charging adapter from the electrical outlet after charging.
- Clean after every use.
- Periodically check the charging adapter and USB charging cable for damage. Never operate this groomer if it has a damaged USB charging cable or charging adapter or it is not working properly.
- Avoid handling the charging adapter with wet hands or storing it in a damp environment.
- Use only with a USB Power Source on a certified product, such as on a computer, receptacle, lamp, class 2 power supply or automotive adapter.
- This device is not a toy, and is intended for household or commercial use only.
- Users with any form of pacemaker or similar device should contact their healthcare provider before using this product.
- In compliance with California law (Proposition 65), we notify you that the groomer may contain small traces of lead in the soldering of the circuit board.
- Stop use immediately if skin becomes irritated or inflamed.
- For sensitive areas only use with short trimming guide (0 mm) attached

The battery shall be disposed in accordance with the local laws and regulations. If possible please recycle it. Users shall not take out or replace the battery by themselves; doing so may damage the product.

two year limited warranty:

Your new plusOne® products carry a warranty against manufacturing defects for two years from the date of original purchase. plusOne® will, at our option and upon submission of a valid proof of purchase within the warranty period, repair or replace the product free of charge.

For assistance or for issues related to performance, damages, warranty, regular maintenance or customer feedback please contact plusOne® toll free at (800) 514-2546, Monday – Friday from 8:30 am until 5:30pm EST or email us at info@myplusOne.com